

# Simple and Affordable Fiber Amplifier Units

- Reasonable price.
- · Use the one-key one-function feature for quick, easy operation.



For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

# **Ordering Information**

# Fiber Amplifier Units [Refer to Dimensions on page 11.]

**Digital Display and Direct Key Setting** 

Item	Appearance	Connection	Ratings and	Model		
iteiii	Appearance	method	Specifications	NPN output	PNP output	
Standard models		Pre-wired (2 m)		E3X-SD21 2M	E3X-SD51 2M	
		Wire-saving connector *	<del></del>	E3X-SD7	E3X-SD9	

<sup>\*</sup>An Amplifier Unit Connector (sold separately) is required.

#### **Bar Display and Adjuster Setting**

Item	Annogranco	Connection	Ratings and	Mo	del
item	Appearance	method	Specifications	NPN output	PNP output
Standard models	and the	Pre-wired (2 m)		E3X-NA11 2M	E3X-NA41 2M
	Salah Baran	Wire-saving connector *1		E3X-NA6	E3X-NA8
High-speed detection models	1371112	Pre-wired (2 m)	Response time: 20 μs	E3X-NA11F 2M	E3X-NA41F 2M
Water-resistant models		Pre-wired (2 m)	Degree of protection:	E3X-NA11V 2M	E3X-NA41V 2M
	H	Connector (M8) *2	IP66	E3X-NA14V	E3X-NA44V

<sup>\*1.</sup> An Amplifier Unit Connector (sold separately) is required. \*2. A Sensor I/O Connector (sold separately) is required.

## Accessories (sold separately)

Amplifier Unit Connectors (Required for models for Wire-saving Connectors.)

Note: Protective seals provided. [Refer to Dimensions on page 15.]

Item	Appearance	Cable length	No. of conductors	Model
Master Connector		2 m	3	E3X-CN11
Slave Connector			1	E3X-CN12

# Ordering Precautions for Amplifier Units Connectors

A Connector is not provided with the Amplifier Unit. Refer to the tables at the right when placing an order.

Fiber Amplifier Units						
Type NPN PNP						
Standard models	E3X-SD7	E3X-SD9				
	E3X-NA6	E3X-NA8				

Applicable Connectors (sold separately)

Master Connector Slave Connector

E3X-CN11 (3-wire) E3X-CN12 (1-wire)

When Using 5 Amplifier Units

5 Fiber Amplifier Units

1 Master Connector + 4 Slave Connectors

# Sensor I/O Connectors (Required for models with M8 Connectors.) [Refer to *Dimensions* on XS3.]

Size	Cable specifications	Appearance		Cab	le type	Model
		Straight		2 m		XS3F-M421-402-A
MQ	M8 Standard cable	connector	THE STATE OF THE S	5 m	Four- conductor	XS3F-M421-405-A
IVIO		L-shaped		2 m	cable	XS3F-M422-402-A
		connector		5 m		XS3F-M422-405-A

#### **Mounting Brackets**

A Mounting Bracket is not provided with the Fiber Amplifier Unit. Order a Mounting Bracket separately if required.

[Refer to Dimensions on page 15.]

Appearance Applicable models		Model	Quantity
	E3X-SD@ E3X-NA@ E3X-NA@F	E39-L143	1
	E3X-NA@V	E39-L148	1

#### **End Plate**

End Plates are not provided with the Fiber Amplifier Unit. Order End Plates separately if required.

[Refer to Dimensions on page 15.]

Appearance	Model	Quantity
	PFP-M	1

# **Ratings and Specifications**

# **Fiber Amplifier Units**

		Digital display and direct key setting	E	Bar display and adjuster set	ting		
	Туре	Standard models	Standard models	High-speed detection models	Water-resistant models		
Item	Model	E3X-SD@	E3X-NA@	E3X-NA@F	E3X-NA@V		
Light source	(wavelength)	Red, 4-element LED (625 nm)	Red, 4-element LED (624 nm)	Red, 4-element LED (625 nm)	Red LED (680 nm)		
Power suppl	ly voltage	12 to 24 VDC ±10%, ripple (p-p): 10% max.					
At Power Supply Voltage of 24 VDC Power consumption/ Current consumption  At Power Supply Voltage of 24 VDC 960 mW max./40 mA max.  At Power Supply Voltage of 12 VDC 960 mW max./80 mA max.  At Power Supply Voltage of 12 VDC 420 mW max./35 mA max.				x. of 12 VDC			
Control outp	out	Open-collector output (NPN or PNP) Load power supply: 26.4 V max., Load current: 50 mA max. (Residual voltage: 1.5 V max.) Light-ON/Dark-ON mode selector	Open-collector output (NPN or PNP) Load power supply: 26.4 V max., Load current: 50 mA max. (Residual voltage: 1 V max.) Light-ON/Dark-ON mode selector.				
Response time		Operate or reset: 200 μs max. (*1)		Operate: 20 μs max. Reset: 30 μs max.	Operate or reset: 200 μs max. (*1)		
Sensitivity a	Sensitivity adjustment  UP/DOWN direct key setting, teaching with/without a workpiece, automatic teaching  8-turn sensor.		8-turn sensitivity adjuster	(with indicator)			
Protection circuits  Power supply reverse polarity protection, output short-circuit protection, output reverse polarity protection  Power supply reverse polarity protection output short-circuit protection							
Timer function	on		No timer, OFF-delay timer; or Timer selector (timer time: 40				
Mutual interf prevention	ference	Up to 5 Amplifiers (optically synchronized) (*2)		None	Up to 5 Amplifiers (optically synchronized) (*2)		
Ambient illur	mination	Receiver side Incandescent lamp: 10,000 lux max. Sunlight: 20,000 lux max.					
Number of games	ang-mounted	16 max. (The ambient temperature specification of	depends on the number of	gang-mounted Amplifiers.)			
Ambient tem range	perature	Operating: Groups of 1 to 3 Amplifiers: -25°C Groups of 4 to 11 Amplifiers: -25°C Groups of 12 to 16 Amplifiers: -25°C Storage: -30°C to 70°C (with no icing or condens	to 50°C to 45°C				
Ambient hun	nidity range	Operating and storage: 35% to 85% (with no condensation)	Operating: 35% to 85% Storage: 35% to 95% (with no condensation)				
Insulation re	sistance	20 M Ω . min. (at 500 VDC)	•				
Dielectric str	rength	1,000 VAC at 50/60 Hz for 1 minute (*3)					
Vibration res	sistance	Destruction: 10 to 55 Hz with a 1.5-mm double ar	mplitude for 2 hours each in	X, Y and Z directions			
Shock resist	ance	Destruction: 500 m/s², for 3 times each in X, Y and	d Z directions				
Degree of protection		IEC 60529 IP50 (with Protective Cover attached)  IEC 60529 IP66 (with Protective Cotached)					
Connection	method	Pre-wired (standard cable length: 2 m), or connector					
Weight (pack	ced state) ( *4)	Pre-wired model: Approx. 100 g, Model with conr	nector: Approx. 55 g				
Material	Case	Polybutylene terephthalate (PBT)					
Material	Cover	Polycarbonate (PC)			Polyethersulfone (PES)		
Accessories		Instruction manual					
*1 When the	re are 8 or mor	e E3X-NA Amplifiers mounted side-by-side, the re	sponse time will be 350 us	max			

- \*1. When there are 8 or more E3X-NA Amplifiers mounted side-by-side, the response time will be 350 μs max.
- \*2. Mutual interference prevention is effective when E3X-SD/-NA-series Fiber Amplifier Units are gang-mounted without other E3X-series Fiber Amplifier Units.
- \*3. Water-resistant models and models with connectors have a dielectric strength of 500 VAC.
- \*4. Add 10 g for water-resistant models.

# **Amplifier Unit Connectors (Wire-saving Connectors)**

		,				
Item	Model	E3X-CN11	E3X-CN12			
Rated cui	rrent					
Rated vol	Itage	50 V				
Contact r	20 m \Omega max. (20 mVDC max., 100 mA max.) (The above figure is for connection to the Fiber Amplifier Unit and the adjacent Connector. It does not include the conductor resistant the cable.)					
Number o	of insertions	Destruction: 50 times (for connection to the Fiber Amplifier Unit and	the adjacent Connector)			
Meterial	Housing	Polybutylene terephthalate (PBT)				
Material Contact Phosphor bronze/gold-plated nickel						
Weight (p	packed state)	Approx. 55 g	Approx. 25 g			

# Sensing distance Threaded Models

Detection				Sensing distance (mm)		
method	Sensing direction	Size	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V
	Right-angle		E32-T11N 2M	530	160	280
	Right-angle		E32-LT11N 2M	1,800	600	900
Through-beam		M4	E32-T11R 2M	560	160	280
	Straight		E32-LT11 2M	2,100	700	1,050
			E32-LT11R 2M	1,800	600	900
	Right-angle	M3	E32-C31N 2M	25	7.5	13
		IVIO	E32-C21N 2M	65	21	32
		M4	E32-D21N 2M	170	56	85
		M6	E32-C11N 2M	170	50	85
			E32-LD11N 2M	170	56	85
			E32-D21R 2M	30	10	15
Reflective		M3	E32-C31 2M	80	26	40
			E32-C31M 1M	00	20	40
	Straight	M4	E32-D211R 2M	30	10	15
	Straight		E32-D11R 2M	180	60	90
		M6	E32-CC200 2M	300	100	150
		IVIO	E32-LD11 2M	180	60	90
			E32-LD11R 2M	170	56	85

**Cylindrical Models** 

Detection				Sensing distance (mm)		
method	Size	Sensing direction	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V
	1 dia.		E32-T223R 2M	120	36	60
Through-beam	1.5 dia.	Top-view	E32-T22B 2M	200	60	100
miougn-beam	3 dia.		E32-T12R 2M	560	160	280
		Side-view	E32-T14LR 2M	220	66	110
	1.5 dia.		E32-D22B 2M	30	10	15
	1.5 dia. + 0.5 dia.		E32-D43M 1M	6	2	3
Reflective		Top-view	E32-D22R 2M	30	10	15
Reliective	3 dia.		E32-D221B 2M	70	20	35
			E32-D32L 2M	160	50	80
	3 dia. + 0.8 dia.		E32-D33 2M	16	4	10

## **Flat Models**

Detection			Sensing distance (mm)			
method	Sensing direction	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V	
	Top-view	E32-T15XR 2M	560	160	280	
Through-beam	Side-view	E32-T15YR 2M	220	66	110	
	Flat-view	E32-T15ZR 2M	220		110	
	Top-view	E32-D15XR 2M	180	60	90	
Reflective	Side-view	E32-D15YR 2M	40	10	20	
	Flat-view	E32-D15ZR 2M	40	10	20	

# Sleeve Models

Detection			S	Sensing distance (mm	)
method	Sensing direction	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V
	Side-view	E32-T24R 2M	60	18	30
	Side-view	E32-T24E 2M	180	36	60
Through-beam		E32-T21-S1 2M	130	43	65
	Top-view	E32-T33 1M	40	13.5	20
		E32-TC200BR 2M	560	160	280
	Side-view	E32-D24R 2M	14	4.6	7
	Side-view	E32-D24-S2 2M	26	8	13
		E32-D43M 1M	6	2	3
		E32-D331 2M	3	1	1.5
		E32-D33 2M	16	4	10
Reflective		E32-D32-S1 0.5M	14	4	7
Reliective	Top-view	E32-D31-S1 0.5M	14	4	1
	rop-view	E32-DC200F4R 2M	30	10	15
		E32-D22-S1 2M	57	10	20
		E32-D21-S3 2M	180	19	28
		E32-DC200BR 2M		60	90
		E32-D25-S3 2M	57	19	28

# Small-spot, Reflective

		Center distance		!	Sensing distance (mm	)	
Туре	Spot diameter	r (mm) Model		E3X-SD E3X-NA	E3X-NA F	E3X-NA V	
Variable spot	0.1 to 0.6 dia.	6 to 15	E32-C42 1M + E39-F3A	Spot diameter of 0.1 t	to 0.6 mm at 6 to 15 mm	l.	
variable spot	0.3 to 1.6 dia.	10 to 30	E32-C42 1M + E39-F17	Spot diameter of 0.3 t	to 1.6 mm at 10 to 30 m	m.	
Parallel light	4 dia.	0 to 20	E32-C31 2M + E39-F3C	Snot diameter of 4 mi	m may at 0 to 20 mm		
Paraller light 4 dia.	4 ula.	0 10 20	E32-C31N 2M + E39-F3C	Spot diameter of 4 mm max. at 0 to 20 mm.			
Intograted lane	0.1 dia.	5	E32-C42S 1M	Spot diameter of 0.1 mm at 5 mm.			
Integrated lens	6 dia.	50	E32-L15 2M	Spot diameter of 6 mm at 50 mm.			
	0.1 dia.		E32-C41 1M + E39-F3A-5	Spot diameter of 0.1 i	mm at 7 mm.		
	0.5 dia.	7	E32-C31 2M + E39-F3A-5	Spot diameter of 0.5 mm at 5 mm.			
	0.5 dia.		E32-C31N 2M + E39-F3A-5	Spot diameter of 0.5 i	illiii at 5 illiii.		
Small anat	0.2 dia.		E32-C41 1M + E39-F3B	Spot diameter of 0.2 i	mm at 17 mm.		
Small-spot	0.5 -1:-	17	E32-C31 2M + E39-F3B	0	47		
	0.5 dia.		E32-C31N 2M + E39-F3B	Spot diameter of 0.5 i	mm at 17 mm.		
	2 dia	50	E32-CC200 2M + E39-F18	0			
	3 dia.	50	E32-C11N 2M + E39-F18	Spot diameter of 3 mi	Spot diameter of 3 mm at 50 mm.		

#### **High-power Beam**

		Aperture		Se	ensing distance (mm)	
Туре	Sensing direction	angle	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V
	Right-angle	15°	E32-LT11N 2M	1,800	600	900
<b>T</b>		10°	E32-T17L 10M	20,000 *1	8,400	14,000
Through-beam Integrated lens	Top-view	15°	E32-LT11 2M	2,100	700	1,050
integrated teris		15°	E32-LT11R 2M	1,800	600	900
	Side-view	30°	E32-T14 2M	3,600	1,080	1,800
	Dight angle	12°	E32-T11N 2M + E39-F1	3,700	1,110	2,100
	Right-angle	6°	E32-T11N 2M + E39-F16	4,000 *2	2,000	3,600
	Top-view	12°	E32-T11R 2M + E39-F1	4,000 *2	1,260	2,100
	i op-view	6°	E32-T11R 2M + E39-F16	4,000 *2	2,000	3,600
	Side-view	60°	E32-T11R 2M + E39-F2	440	130	220
	Tan view	12°	E32-T11 2M + E39-F1	4,000 *2	1,200	2,000
	Top-view	6°	E32-T11 2M + E39-F16	4,000 *2	2,600	4,000 *2
	Side-view	60°	E32-T11 2M + E39-F2	720	200	360
Through-beam	Tan Mary	12°	E32-T51R 2M + E39-F1	2,000	720	1,650
models with	Top-view	6°	E32-T51R 2M + E39-F16	4,000 *2	1,560	14,000 1,050 900 1,800 2,100 3,600 2,100 3,600 4,000 *2 2,000 4,000 *2 2,000 1,100 2,300 1,400 3,900 3,900 1,400 4,000 *2
lenses	Side-view	60°	E32-T51R 2M + E39-F2	360	120	200
	Top-view	12°	E32-T81R-S 2M + E39-F1	1,800	630	1,100
	i op-view	6°	E32-T81R-S 2M + E39-F16	4,000 *2	1,300	2,300
	Side-view	60°	E32-T81R-S 2M + E39-F2	280	84	140
	Tan view	12°	E32-T61-S 2M + E39-F1	4,000 *2	1,800	3,000
	Top-view	6°	E32-T61-S 2M + E39-F16	4,000 *2	2,340	3,900
	Side-view	60°	E32-T61-S 2M + E39-F2	780	260	390
	Tan view	12°	E32-T51 2M + E39-F1-33	2,400	720	1,400
	Top-view	6°	E32-T51 2M + E39-F16	4,000 *2	3,120	4,000 *2
Reflective Integrated lens	Top-view	4°	E32-D16 2M	800	140	40 to 400

- \*1. The fiber length is 10 m on each side, so the sensing distance is given as 20,000 mm.
  \*2. The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

#### **Narrow View**

Detection		Aperture		Sensing distance (mm)			
method	Sensing direction	angle	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V	
		1.5°	E32-A03 2M	890	267	445	
		1.5	E32-A03-1 2M	090	207	440	
Through-beam	Side-view	3.4°	E32-A04 2M	340	102	170	
milough-beam	Side-view		E32-T24SR 2M	1,170	360	600	
		4°	E32-T24S 2M	1,400	420	700	
			E32-T22S 2M	2,000	600	1,000	

# **Detection without Background Interference**

Detection			S	Sensing distance (mm)	
method	Sensing direction	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V
I instituted	Flat-view	E32-L16-N 2M	0 to 15	0 to 12	0 to 15
Limited- reflective	i lat-view	E32-L24S 2M		0 to 4	
1011000140	Side-view	E32-L25L 2M	5.4 to 9 (center 7.2)	5.4 to 8 (center 7.2)	5.4 to 9 (center 7.2)

**Transparent Object Detection (Retro-reflective)** 

Detection				Sensing distance (mm)		
method	Feature	Size	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V
	Film detection	М3	E32-C31 2M + E39-F3R + E39-RP37	220	50	75
Retroreflective	Square	-	E32-R16 2M	1,500	1,000	150 to 1,500
Sensors	Threaded Models		E32-R21 2M	10 to 250	250	10 to 250
	Hex-shaped	M6	E32-LR11NP 2M + E39-RP1	600	200	300

**Transparent Object Detection (Limited-reflective)** 

Detection		Sensing		S	Sensing distance (mm	
method	Feature	direction	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V
	Small size		E32- L24S 2M		0 to 4	
	Standard		E32-L16-N 2M	0 to 15	0 to 12	0 to 15
	Glass substrate alignment, 70°C	Flat-view	E32-A08 2M		10 to 20	
Retro-reflective	Standard/ long-distance		E32-A12 2M	12 to 30	-	_
	Side view form	Side-view	E32-L25L 2M	5.4 to 9 (center 7.2)	5.4 to 8 (center 7.2)	5.4 to 9 (center 7.2)
	Glass substrate mapping, 70°C	Top-view	E32-A09 2M		15 to 38 (center 25)	

Chemical-resistant, Oil-resistant

Detection		Comeina			F3X-NA F F3X-NA V		
method	Туре	Sensing direction	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V	
	Oil-resistant	Right-angle	E32-T11NF 2M	4,000 *	1,400	2,400	
		Top-view	E32-T12F 2M	3,200	960	1,600	
Through-beam	Chemical/oil-resistant	rop-view	E32-T11F 2M	2,100	760	1,050	
mough boam		Side-view	E32-T14F 2M	400	120	200	
	Chemical/oil-resistant at 150°C	Top-view	E32-T51F 2M	1,400	400	700	
	Semiconductors: Cleaning, developing, and etching; 60°C		E32-L11FP 2M		flens (Recommended s m center of mounting homm)		
Reflective	Semiconductors: Resist stripping; 85°C	Top-view	E32-L11FS 2M		flens (Recommended s m center of mounting homm)		
	Chemical/oil-resistant		E32-D12F 2M	100	32	50	
	Chemical-resistant cable		E32-D11U 2M	180	60	90	

<sup>\*</sup>The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

**Bending-resistant** 

Detection			5	Sensing distance (mm	)
method	Size	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V
	1.5 dia.	E32-T22B 2M	200	60	100
Through-beam	M3	E32-T21 2M	200	00	100
	M4	E32-T11 2M	720	200	360
	Square	E32-T25XB 2M	150	40	75
	1.5 dia.	E32-D22B 2M	30	10	15
	M3	E32-D21 2M	30	10	15
Reflective	3 dia.	E32-D221B 2M	70	20	35
Reliective	M4	E32-D21B 2M	70	20	33
	M6	E32-D11 2M	180	60	90
	Square	E32-D25XB 2M	50	16	25

#### **Heat-resistant**

Detection				Sensing distance (mm	)	
method	Heat-resistant temperature	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V	
	100°C	E32-T51R 2M	400	120	225	
Through-beam	150°C	E32-T51 2M	800	240	400	
	200°C	E32-T81R-S 2M	360	100	180	
	350°C	E32-T61-S 2M	600	180	300	
	100°C	E32-D51R 2M	140	42	70	
	150°C	E32-D51 2M	240	80	120	
	200°C	E32-D81R 2M	90	27	45	
Reflective	300°C	E32-A08H2 2M	10 to 20			
	300 C	E32-A09H2 2M		20 to 30 (center 25)		
	350°C	E32-D61 2M	90	27	45	
	400°C	E32-D73 2M	60	18	30	

#### Area Beam

Detection		Sensing		Sensing distance (mm)		
method	Туре	width	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V
		11 mm	E32-T16PR 2M	800	260	450
Through-beam	Area	''''	E32-T16JR 2M	700	220	390
		30 mm	E32-T16WR 2M	1,380	400	690
Reflective	Array	11 mm	E32-D36P1 2M	150	50	75

## **Liquid-level Detection**

Detection				Sensing distance (mm)		
method	Pipe diameter	Feature	Model	E3X-SD E3X-NA	E3X-NA F	E3X-NA V
	3.2/6.4/9.5 dia.	Stable residual quantity detection	E32-A01 5M	Applicable tube: Transparent tube with a diameter of 3.2, 6.4, or 9.5 mm, Recommended wall thickness: 1 mm		
Tube-mounting	8 to 10 dia.	Mounting at multi levels	E32-L25T 2M	Applicable tube: Transparent tube with a diameter of 8 to 10 mm, Recommended wall thickness: 1 mm		meter of 8 to 10 mm,
	No restrictions	Large tubes	E32-D36T 2M	Applicable tube: Trans	sparent tube (no restric	tions on diameter)
Liquid contact (heat-resistant up to 200°C)	-	-	E32-D82F1 4M	Liquid-contact model		


# Vacuum-resistant

Detection	Heat-resistant temperature	Model	Sensing distance (mm)		
method			E3X-SD E3X-NA	E3X-NA F	E3X-NA V
Through-beam	120°C	E32-T51V 1M	200	-	100
		E32-T51V 1M + E39-F1V	1,200	-	600
	200°C	E32-T84SV 1M	500	-	250


## FPD, Semiconductors, and Solar Cells

Detection method	Application	Operating temperature	Model	Sensing distance (mm)		
				E3X-SD E3X-NA	E3X-NA F	E3X-NA V
	Glass presence detection	70°C	E32-L16-N 2M	0 to 15	0 to 12	0 to 15
	Glass substrate alignment		E32-A08 2M	10 to 20		
		300°C	E32-A08H2 2M			
		70°C	E32-A12 2M	12 to 30	-	_
	Glass substrate mapping		E32-A09 2M	15 to 38 (center 25)		
Limited- reflective		300°C	E32-A09H2 2M	20 to 30 (center 25)		
renective	Wet processes: Cleaning, Resist developing and etching	60°C	E32-L11FP 2M	8 to 20 mm from tip of lens (Recommended sensing distance: 11 mm), 19 to 31 mm from center of mounting hole A (Recommended sensing distance: 22 mm)		
	Wet process: Resist stripping	85°C	E32-L11FS 2M	8 to 20 mm from tip of lens (Recommended sensing distance: 11 mm), 32 to 44 mm from center of mounting hole A (Recommended sensing distance: 35 mm)		
Through- beam	Wafer mapping	70°C	E32-A03 2M	890	267	445
			E32-A03-1 2M	030		440
			E32-A04 2M	340	102	170
			E32-T24SR 2M	1,170	360	600
			E32-T24S 2M	1,400	420	700


# I/O Circuit Diagrams

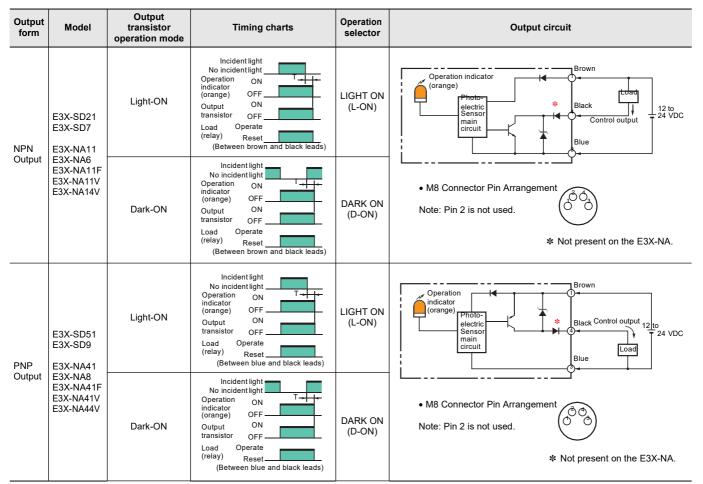

Note: Timing Charts for Timer Settings (T: Set Time)



#### Plug (Sensor I/O Connector)



Classification	Wire color	Connection pin	Application
	Brown	1	Power supply (+V)
DC	White	2	
DC	Blue	3	Power supply (0 V)
	Black	4	Output

Note: Pin 2 is not used.

# **Safety Precautions**

# **MARNING**

This product is not designed or rated for ensuring safety of persons either directly or indirectly.



Do not use it for such purposes.

# Caution

Do not exceed the rated voltage. Excess voltage may result in malfunction or fire.



Do not use an AC power supply.
Using an AC power supply may result in rupturing.



High-temperature environments may result in burn injury.



#### **Precautions for Safe Use**

The following precautions must be observed to ensure safety.

- Do not use the product in locations where flammable or explosive gas is present.
- 2. Do not use the product in locations subject to splashing water, oil, or chemicals, or in locations subject to steam.
- Do not attempt to disassemble, repair, or modify the product.
- 4. Do not apply voltage or current in excess of the rated ranges.
- 5. Do not use the product in atmospheres or environments that exceed product ratings.
- 6. Do not wire the product incorrectly, such as using incorrect power supply polarity.
- 7. Connect the load properly.
- 8. Do not short-circuit both ends of the load.
- 9. Do not use the product if the case is damaged.
- When disposing of the product, dispose of it asindustrial waste
- 11. Do not use the product in locations subject to direct sunlight.
- 12. The surface temperature of the product may rise as a result of the ambient temperature, power supply, or other usage conditions. Use caution when performing maintenance and washing. Failure to do so may result in burn injury.

#### **Precautions for Correct Use**

Do not use the product in atmospheres or environments that exceed product ratings.

#### **Fiber Amplifier Units**

#### Designing

#### **Communications Hole**

The hole on the side of the Amplifier Unit is a communications hole for preventing mutual interference when Amplifier Units are mounted side-by-side. The E3X-MC11 Mobile Console (sold separately) cannot be used.

If an excessive amount of light is received via the Sensor, the mutual interference prevention function may not work. In this case, make the appropriate adjustments using the sensitivity adjuster.


Mutual interference prevention is effective when E3X-SD/-NA-series Amplifier Units are gang-mounted without other E3X-series Amplifiers.

#### Mounting


#### **DIN Track Mounting/Removal**

#### **Mounting Fiber Amplifier Units**

1. Mount the Amplifier Units one at a time onto the DINtrack.



2. Slide the Amplifier Units together, line up the clips, and press the Amplifier Units together until they click into place.



# **Removing Fiber Amplifier Units**

Slide Amplifier Units away from each other, and remove from the DIN track one at a time. (Do not attempt to remove Amplifier Units from the DIN track without separating them first.)


- Note 1. The specifications for ambient temperature will vary according to the number of Amplifier Units used together. For details, refer to *Ratings* and *Specifications*.
  - Always turn OFF the power supply before mounting or removing Amplifier Units.

#### **Fiber Unit Connection and Disconnection**

The E3X Amplifier Unit has a lock lever. Connect or disconnect the fiber units to or from the E3X Amplifier Unit using the following procedures:

#### 1. Connection


Open the Protective Cover, insert the fiber units according to the fiber unit insertion marks on the side of the Amplifier Unit, and lower the lock lever.



Note: If one of the fibers from the Fiber Unit is labeled as the Emitter fiber, such as with a Coaxial Sensor, insert that fiber into the Emitter section. Refer to Dimensions for the Fiber Unit to see if there is an Emitter fiber label.

#### 2. Disconnection

Remove the Protective Cover and raise the lock lever to pull out the fiber unit.

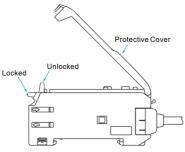

Note: To maintain the fiber unit properties, confirm that the lock is released before removing the fiber unit.

#### 3. Precautions for Fiber UnitConnection/Disconnection

Be sure to lock or unlock the lock lever within an ambient temperature range between  $-10^{\circ}\text{C}$  and  $40^{\circ}\text{C}$ .

#### Operating Environment

#### **Ambient Conditions**

If dust or dirt adhere to the hole for optical communications, it may prevent normal communications. Be sure to remove any dust or dirt before using the Units.

#### Other

#### **Protective Cover**


Be sure to mount the Protective Cover before use.

#### **Fiber Amplifier Unitts with Connectors**


#### Mounting

#### **Mounting Connectors**

 Insert the Master or Slave Connector into the Amplifier Unit until it clicks into place.




- 2. Join Amplifier Units together as required after all the Master and Slave Connectors have been inserted.
- Attach the stickers (provided as accessories) to the sides of Master and Slave Connectors that are not connected to other Connectors.



Note: Attach the stickers to the sides with grooves.


#### **Removing Connectors**

- 1. Slide the slave Amplifier Unit for which the Connector is to be removed away from the rest of the group.
- 2. After the Amplifier Unit has been separated, press down on the lever on the Connector and remove it. (Do not attempt to remove Connectors without separating them from other Amplifier Units first.)




#### **Mounting End Plate (PFP-M)**

Depending on how it is mounted, an Amplifier Unit may move during operation. In this case, use an End Plate. Before mounting an End Plate, remove the clip from the master Amplifier Unit using a nipper or similar tool.




The clip can also be removed using the following mechanism, which is incorporated in the construction of the section underneath the clip.

 Insert the clip to be removed into the slit underneath the clip on another Amplifier Unitt.

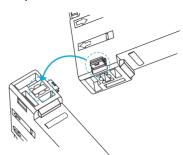

2. Remove the clip by rotating the Amplifier Unit.

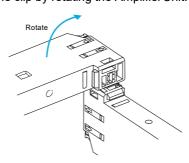


#### **Pull Strengths for Connectors (Including Cables)**


E3X-CN11: 30 N max. E3X-CN12: 12 N max.


# **Dimensions**


# **Fiber Amplifier Units**

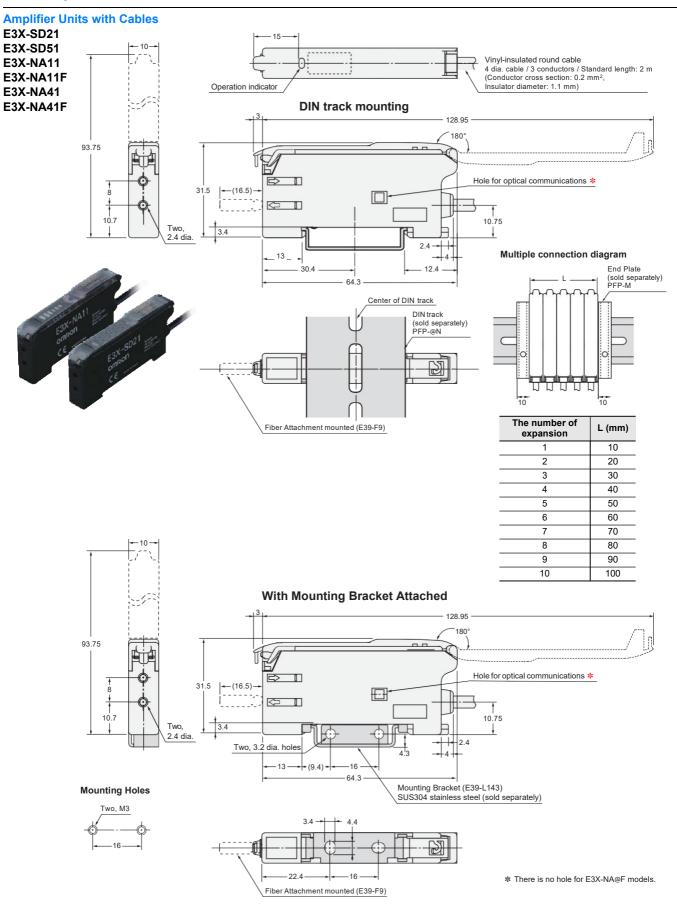

Note: When using E39-L143 Mounting Brackets, there will be small gaps between the Fiber Amplifier Units if they are mounted side by side.

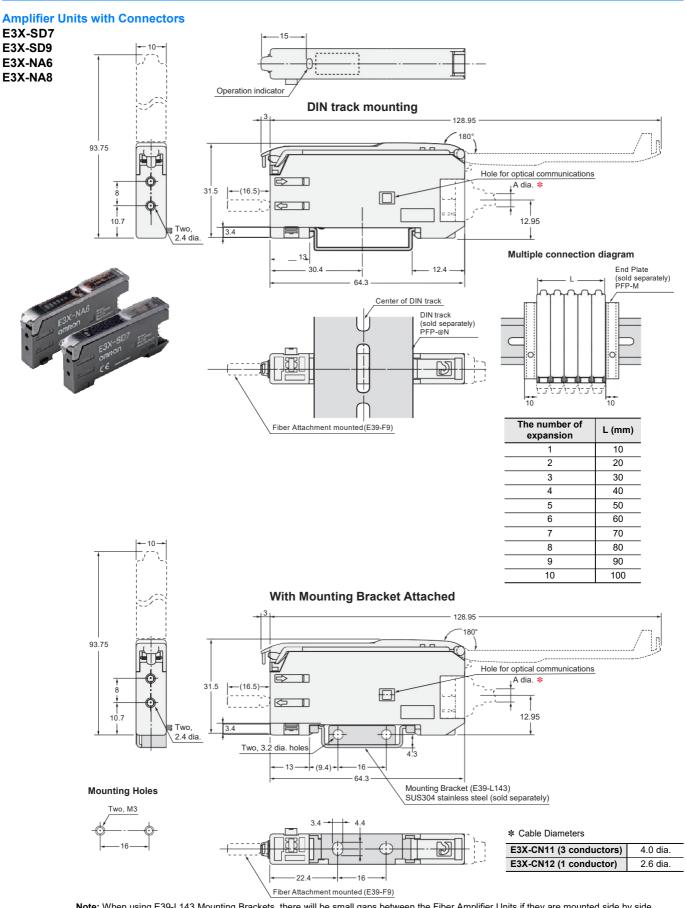

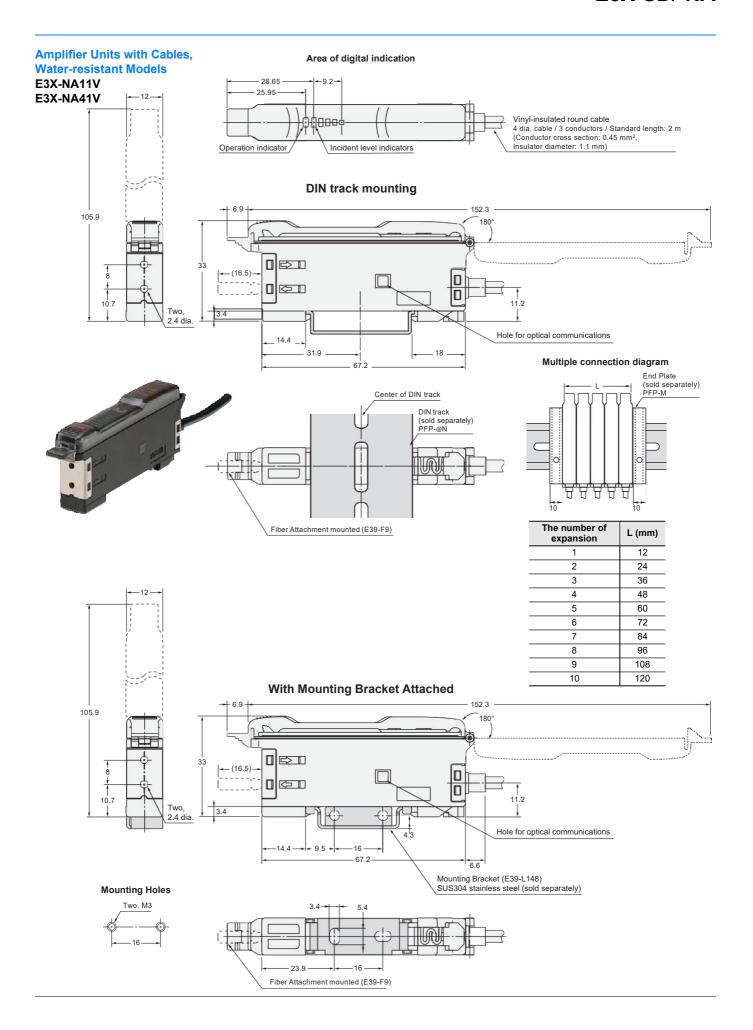

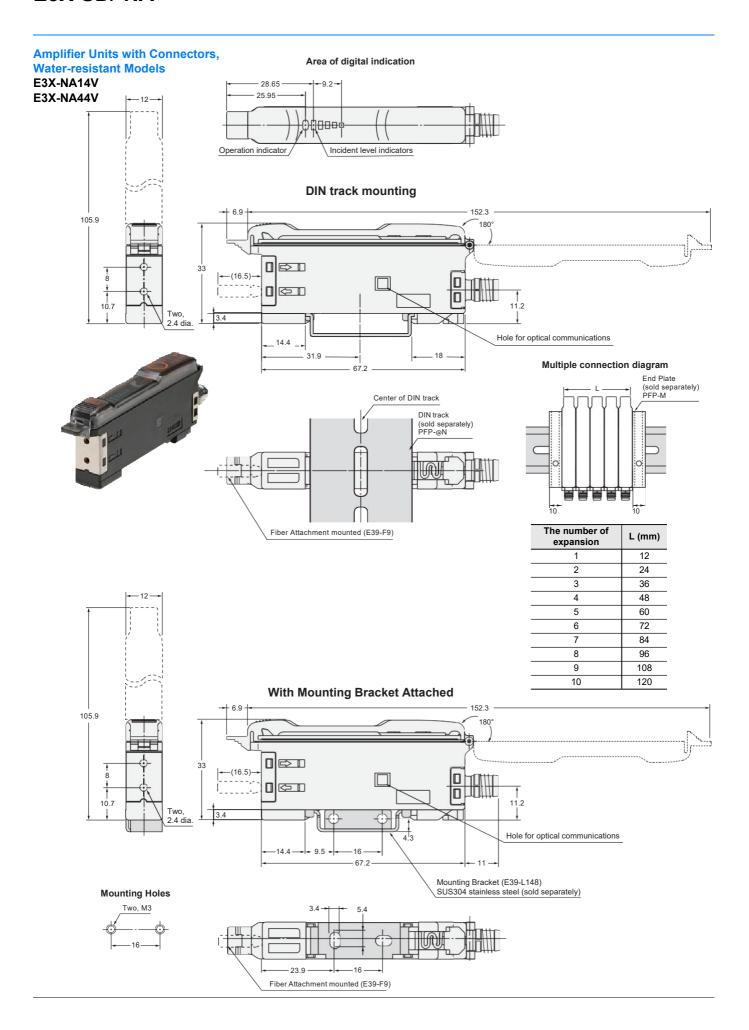


# **Amplifier Unit Connectors (Wire-saving Connectors)**

# Master Connector

E3X-CN11



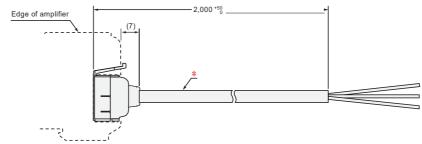


\* E3X-CN11: 4 dia. cable / 3 conductors / Standard length: 2 m (Conductor cross section: 0.2 mm² (AWG24), Insulator diameter: 1.1 mm)

## **Slave Connector**

# E3X-CN12

\* E3X-CN12: 2.6 dia. cable / 1 conductor / Standard length: 2 m (Conductor cross section: 0.2 mm² (AWG24), Insulator diameter: 1.1 mm)



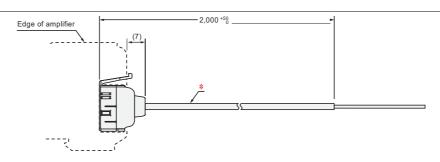


# Accessories (sold separately)

# **Mounting Brackets** E39-L143





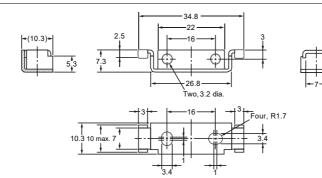





# **End Plates**

PFP-M









#### **Nomenclature**

# Fiber Amplifier Units E3X-SD

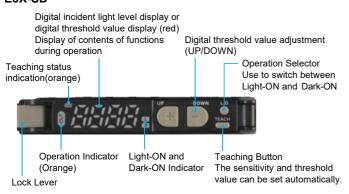

#### E3X-NA

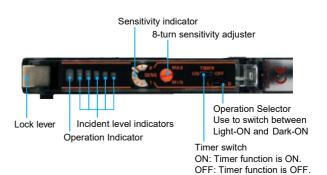

# **Operating Procedure**

#### E3X-SD

#### 1 Sensitivity Setting

The sensitivity can be set with the UP and DOWN Keys similar to using an adjuster knob. The sensitivity can also be easily set by using the following two teaching functions.

#### 2-1. Teaching with/without a Workpiece

Two points (one with the workpiece and the other without) are detected, and the operating level is set to the midpoint. Light level is also automatically set to the optimal value.

Operation description	Button/Key	
Press the TEACH button with the workpiece.	TEACH	
Press the TEACH button without the workpiece.	TEACH	

#### 2-2. Automatic Teaching

Changes within a time are detected, and the operating level is set to the midpoint between the maximum and the minimum values of the changes. This setting is optimal for when the workpieces cannot be stopped. Execute automatic teaching again if the incident light level is not automatically set to the optimal value.

Operation description	Button/Key
Press the TEACH button for 3 s min. Let the	TEACH
workpiece pass while the button is pressed.	

#### E3X-NA

# 1 Displays

A bar display (with four green and one red) showing excess gain is provided in addition to the orange operation indicator. Use these when adjusting the light axis and setting the sensitivity at setup.

Display/indicator status (for L/ON)	Excess gain level	Description	
Operation indicator  Excess gain level display	Approx. 120% min.	Stable incident light	
	Approx. 110% to 120%		
	Approx. 90% to 110%	Unstable incident light or Unstable interrupted light	
	Approx. 80% to 90%	Stable interrupted light	
	Approx. 80% max.		

#### READ AND UNDERSTAND THIS DOCUMENT

Please read and understand this document before using the products. Please consult your OMRON representative if you have any questions or comments

#### **WARRANTY**

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE. OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### **SUITABILITY FOR USE**

THE PRODUCTS CONTAINED IN THIS DOCUMENT ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES. Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- · Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### **PERFORMANCE DATA**

Performance data given in this document is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### **ERRORS AND OMISSIONS**

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

#### **PROGRAMMABLE PRODUCTS**

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

#### **COPYRIGHT AND COPY PERMISSION**

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

This document provides information mainly for selecting suitable models. Please read the Instruction sheet carefully for information that the user must understand and accept before purchase, including information on warranty, limitations of liability, and precautions.

# **OMRON Corporation** Industrial Automation Company

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V. Sensor Business Unit

Sensor Business Unit Carl-Benz-Str. 4, D-71154 Nufringen, Germany Tel: (49) 7032-811-0/Fax: (49) 7032-811-199

OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road #05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711 OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200 **Authorized Distributor:** 

© OMRON Corporation 2010 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

CSM\_6\_3\_0220 Cat. No. E401-E1-01

0110