111

LASER SENSORS PHOTOELECTRIC SENSORS MICRO PHOTOELECTRIC SENSORS AREA SENSORS SAFETY LIGHT CURTAINS SAFETY COMPONENTS PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS MEASUREMENT SENSORS STATIC CONTROL DEVICES

Digital Fiber Sensor FX-550 SERIES

■ General terms an	d conditions F-3	Selection guide		P.3~
Related Information Fiber selection	P.5~	■Glossary of terms.	P.1	549~
General precaution	ons P.1552~			
C STATE	A MAN CO. LOS FX-551-CO FX-550-FX-550-FX-550-FX-550-FX-50-		CE	
Aline in Aline			PNP output type available	Interference Light intensity prevention monitor
	panasonic.net/id/	/pidsx/global	Automatic sensitivity setting	

Significantly improved stability and operation ease thanks to the industry's top* emission power and enhanced versatility! • As of January 2016, in-company survey

Industry's No. 1!* Three times higher emission power and 1.6 times longer sensing range than conventional models! • As of January 2016, in-company survey Ample sensing distance even with thin fiber

The sensing range of the thin reflective type fiber is about 1.6 times longer than that of a conventional product (the sensing range of the standard reflective type fiber is about 1.4 times longer). This adds extra flexibility to the sensor layout.

FD-41 🕅 Tough

FD-41 Ough

MACHINE VISION SYSTEMS
UV CURING SYSTEMS

Fiber

FT-31

FT-42

FD-41

FD-61

Incident light intensity

FX-501

FX-551

FX-551

480 mm 18.898 in 315 mm 12.402

1,470 mm 57.874 in 1,130 mm 44.488

200 mm 7.874 in 125 mm 4.921 in

620 mm 24.409 in 450 mm 17.717 in

LASER MARKERS

HUMAN MACHINE INTERFACES

MANAGEMENT SOLUTIONS

FA COMPONENTS

PLC

ENERGY



When the hysteresis is the same, the higher incident light intensity results in more stable detection.

in sensing range

152 %

130 %

160 %

138 %

Sensing range (STD mode) Rate of increase

FX-501

When the hysteresis is the same, the higher incident light intensity results in more stable detection.

Stable detection!

Easy adjustment of beam axis

Thanks to the high emission power, a slight deviation of beam axis causes no problem. It is ideal for use in dusty areas* or for detection through an extremely small slit. * Need to confirm properoperation

in installed condition.



1.6 times



When setting to activate the environment resistance mode in the emission frequency setting, the ambient illuminance for LED lights becomes about 2.5 times higher than that in the normal mode. This reduces erroneous detections caused by LED lights.




Simplified functions for improved operation ease

The FX-500 series and newer models are equipped with only basic functions for improved ease of use. No matter which model you select, they are all easy to use.

MODE NAVI + Direct setting

MODE NAVI uses three indicators and a dual display to show the amplifier's basic operations. The current operation mode can be confirmed at a glance, so even a first-time user can easily operate the amplifier.

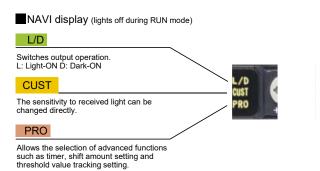

Direct setting Direct adjustment





Teaching can be done during RUN mode.



PRESSURE / FLOW

12

FIBER SENSORS

SENSORS PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC

SENSORS

SAFFTY LIGHT CURTAINS / SAFETY COMPONENTS

AREA SENSORS

LASER

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES LASER MARKERS

PLC

HUMAN MACHINE ENERGY MANAGEMENT SOLUTIONS

FA COMPONENTS

MACHINE VISION SYSTEMS UV CURING SYSTEMS

Guide
Fibers
Fiber Amplifiers
Other Products

FX-500	
FX-550	_
FX-100	
FX-410	

List of functions in PRO mode

PRO 1	Response time setting, timer setting, shift amount setting
PRO 2	Teaching lock setting, digital display item setting, digital display turning setting, Eco setting
PRO 3	Display adjustment setting, reset setting, emission frequency setting, threshold value tracking setting


No need to specify a main unit or sub unit

All FX-500 amplifiers can be used as either a main unit or a sub unit. Just use a main cable or a sub cable to distinguish the two. This reduces the costs of inventory management.

Wire-saving, space-saving

The quick-connection cables enable reduction in wiring. The connections and man-hours required for the relay terminal block setup can be reduced and valuable space is saved.



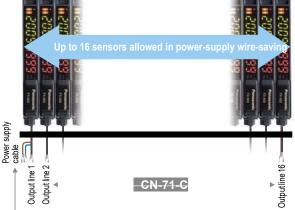

* Connection of up to 16 units with FX-500 / FX-400 / DPS-400 / LS-400 is possible CN-73-C□ Note: FX-550 series is not equipped with a communication function. When connecting to the host communication units SC-GU3 series

and SC-GU1-485, please use FX-500 series.

ORDER GUIDE

Amplifiers Quick-co	nnection cable is not supplied with FX-5	51(P). Please order i	t separately.	
Туре	Appearance	Model No.	Emitting element	Output
Connector type	MAVI O acce	FX-551	Red LED	NPN open-collector transistor
Connector type		FX-551P		PNP open-collector transistor
Cable type	MAVI OCCE	FX-551-C2		NPN open-collector transistor
Cable type		FX-551P-C2		PNP open-collector transistor

Quick-connection cables Quick-connection cable is not supplied with the connector type amplifier. Please order it separately.

Туре	Model No.		Description	Main cable • CN-73-C□	A A A
	CN-73-C1	Length: 1 m 3.281 ft	0.2 mm ² 3-core cabtyre cable, with connector		SAF
Main cable (3-core)	CN-73-C2	Length: 2m6.562ft	on one end Cable outer diameter: ø3.3 mm ø0.130 in		
· · ·	CN-73-C5	Length: 5m 16.404 ft		Sub cable	
	CN-71-C1	Length: 1 m 3.281 ft	0.2 mm ² 1-core cabtyre cable, with connector	• CN-71-C	a di
Sub cable (1-core)	CN-71-C2	Length: 2m 6.562 ft	on one end Cable outer diameter: ø3.3 mm ø0.130 in		
· · /	CN-71-C5	Length: 5m 16.404 ft	Connectable to a main cable up to 15 cables.		
					10 K3

S V	End plates End pla	ates are not supplied with	the amplifier. Please order them separately when t	he amplifiers are mounted in cascade.
IS A	Appearance	Model No.	Description	
5		MS-DIN-E	When amplifiers are mounted in cascade, or when an amplifier moves depending on the way it is installed on a DIN rail, these end plates clamp amplifiers into place on both sides. Make sure to use end plates when cascading multiple amplifiers together. 2 pcs. per set	

OPTIONS

Fibers				
Fiber Amplifiers Other Products	Designation	Model No.	Description	Amplifier mounting bracket • MS-DIN-2
FX-500	Amplifier mounting bracket	MS-DIN-2	Mounting bracket for amplifier	MAVIO
FX-550				-
FX-100				

LIST OF FIBERS

Refer to "Fiber Selection p.5 ~" for details of each fiber.

Selection Guide Fibers

FX-410

SPECIFICATIONS

\sim	Туре	Connector type	Cable type			
\backslash	NPN output	FX-551	FX-551-C2			
Item	PNP output	FX-551P	FX-551P-C2			
CE markingdir	ective compliance	EMC Directive,	RoHS Directive			
Supply voltage	e	12 to 24 V DC ⁺¹⁰ ₋₁₅ % R	ipple P-P 10 % or less			
Power consumption		Normal operation: 960 mW or less (current consumption 40 mA or less at 24 V supply voltage) ECO mode: 680 mW or less (current consumption 28 mA or less at 24 V supply voltage)				
Output		<npn output="" type=""> NPN open-collector transistor • Maximum sink current: 100 mA • Applied voltage: 30 V DC or less (between output and 0 V) • Residual voltage: 2 V or less (Note 2) (at maximum sink current) • Residual voltage: 2 V or less (Note 2) (at maximum sink current) • Residual voltage: 2 V or less (Note 2) (at maximum sink current) • Residual voltage: 2 V or less (Note 2) (at maximum sink current)</npn>				
I	Output operation	Switchable either Light-Of	l or Dark-ON by L/D mode			
	Short-circuit protection	Incorp	orated			
Response time)	FAST: 60 µs or less, STD: 250 µs or less, LONG: 2 ms or less, U-LG: 4 ms or less, HYPR: 24 ms or less, selectable				
Sensitivity set	ting	2-point teaching / Limit teaching / Full-auto teaching / Manual adjustment				
Incident light sensitivity setting		Incorporated, 4 steps				
Incident light intensity display range		FAST / STD: 0 to 4,000, LONG: 0 to 8,000, U-LG / HYPR: 0 to 9,999				
Fimer functior	1	Incorporated with variable OFF-delay / ON-delay / One-shot / switchable either effective or ineffective				
Timer period		Timer range "ms": 1 to 9,999 ms approx., 1 ms approx., Timer range "sec.": 1 to 32 s approx., 1 s approx., Timer range "1/10 ms": 0.1 to 999.9 ms approx., 0.1 ms approx. (Note 3)				
Different frequency interference prevention function (Note 4)		Incorporated (up to 4 units). Note that the response time varies depending on the setting. F-1: 0.8 ms or less, F-2: 0.9 ms or less, F-3: 1.0 ms or less, F-4: 1.7 ms or less				
Protection		IP40 (IEC)				
Ambient temperature		-10 to +55 °C +14 to +131 °F (If 4 to 7 units are mounted in cascade: -10 to +50 °C +14 to +122 °F or if 8 to 16 units are mounted in cascade: -10 to +45 °C +14 to +113 °F) (No dew condensation or icing allowed), Storage: -20 to +70 °C -4 to +158 °F				
Emitting element (modulated)		Red LED (Peak emission wavelength: 660 nm 0.026 mil)				
Material		Enclosure, Case cover: Polycarbonate, Switch: Polyacetal				
Cable			0.2 mm ² 3-core cabtyre cable, 2 m 6.562 ft long			
Cable extension			Extension up to total 100 m 328.084 ft is possible with 0.3 mm ² , or more, cable. (however, supply voltage 12 V DC or more)			
Weight		Net weight: 15 g approx., Gross weight: 55 g approx.	Net weight: 55 g approx., Gross weight: 90 g approx.			


Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +23 °C +73.4 °F.

2) In case of using the quick-connection cable (cable length 5 m 16.404 ft) (optional).
3) When set to LONG, U-LG, HYPR, IP-F or IP-R, the time range cannot be set to 1/10 ms.
4) This function increases the hysteresis. Check the sensing condition when using the function.


114

FX-500 FX-550 FX-100 FX-410

I/O CIRCUIT AND WIRING DIAGRAMS

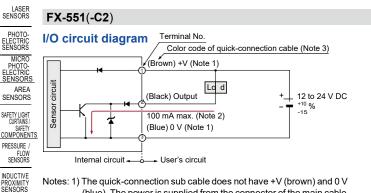


Notes: 1) The quick-connection sub cable does not have +V (brown) and 0 V (blue). The power is supplied from the connector of the main cable. 2) 50 mA max., if five amplifiers or more, are connected together. 3) The color code of the connector attached cable is also the same.

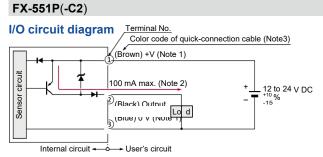

Notes: 1) The guick-connection sub cable does not have +V (brown) and 0 V (blue). The power is supplied from the connector of the main cable. 2) 50 mA max., if five amplifiers or more, are connected together. 3) The color code of the connector attached cable is also the same


PRECAUTIONS FOR PROPER USE

 Never use this product as a sensing device for personnel protection.



Wiring

- Make sure that the power supply is OFF while adding or removing the amplifiers.
- Note that if a voltage exceeding the reted range is applied, or if an AC power supply is directly connected, the product may get burnt or damaged.
- Note that short-circuit of the load or wrong wiring may burn or damage the product.
- · Do not run the wires together with high-voltage lines or power lines, or put them in the same raceway. This can cause malfunction due to induction.
- Verify that the supply voltage variation is within the rating.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this product, connect the frame ground (F.G.) terminal of the equipment to an actual ground.

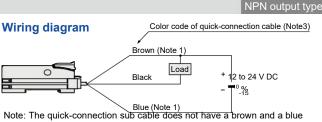


lead wire.

Terminal arrangement diagram



PNP output type



Note: The quick-connection sub cable does not have a brown and a blue lead wire.

Terminal arrangement diagram

C (1)+V @Output (30V

Refer to p.1552~ for general precautions.

- · Make sure to use the quick-connection cable (optional) for the connection of the controller. Extension up to total 100 m 328.084 ft is possible with
- 0.3 mm² or more, cable. However, in order to reduce noise, make the wiring as short as possible.
- Make sure that stress by forcible bending or pulling is not applied to the sensor cable joint and fiber cable.

Others

- · This product has been developed / produced for industrial use only.
- The specification may not be satisfied in a strong magnetic field.
- The ultra long distance (U-LG, HYPR) mode is more likely to be affected by extraneous noise since the sensitivity of that is higher than the other modes. Make sure to check the environment before use.
- Do not use during the initial transient time (FAST, STD: 0.5 sec., U-LG, HYPR: 1 sec.) after the power supply is switched ON.
- · These sensors are only for indoor use.
- Avoid dust. dirt. and steam.
- · Make sure that the product does not come in contact with oil, grease, organic solvents such as thinner, etc., strong acid or alkaline.
- This product cannot be used in an environment containing inflammable or explosive gases.
- · Never disassemble or modify this product.
- This product adopts EEPROM. Settings cannot be done a million times or more because of the EEPROM's lifetime.

SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS STATIC CONTROL DEVICES LASER MARKERS PLC HUMAN MACHINE INTERFACES ENERGY MANAGEMENT FA MACHINE VISION SYSTEMS U٧

CURING

Selection

Guide

Fibers Fiber Amplifiers

Other

Product

FX-500

FX-100


FX-410

PARTICUL AR

USE SENSORS

SENSOR OPTIONS

116

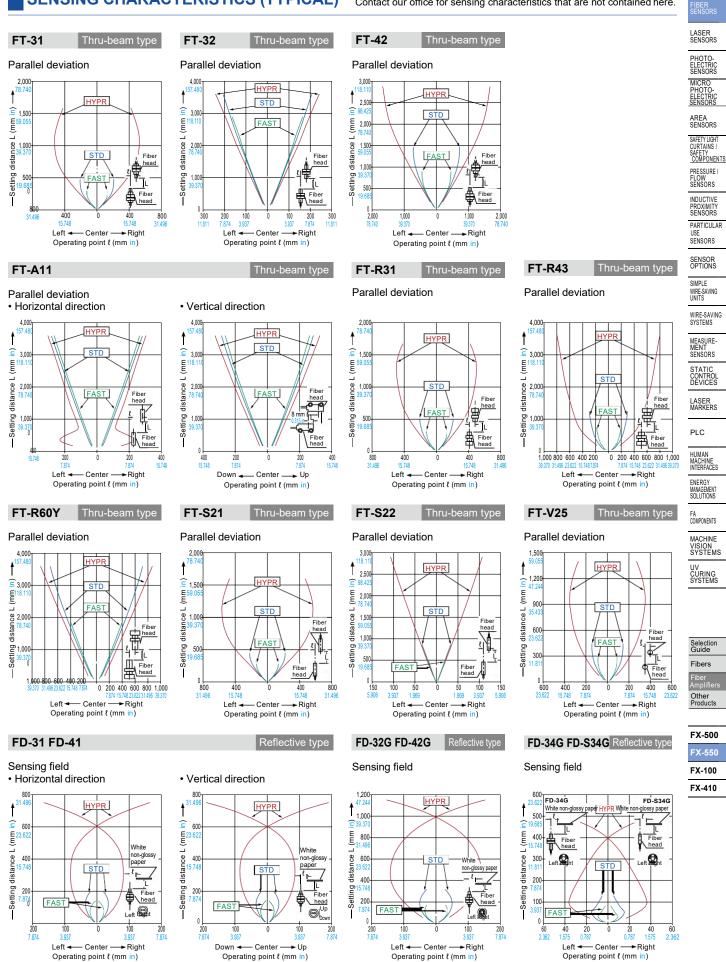


SENSING CHARACTERISTICS (TYPICAL)

Contact our office for sensing characteristics that are not contained here.

SENSING CHARACTERISTICS (TYPICAL)

Contact our office for sensing characteristics that are not contained here.

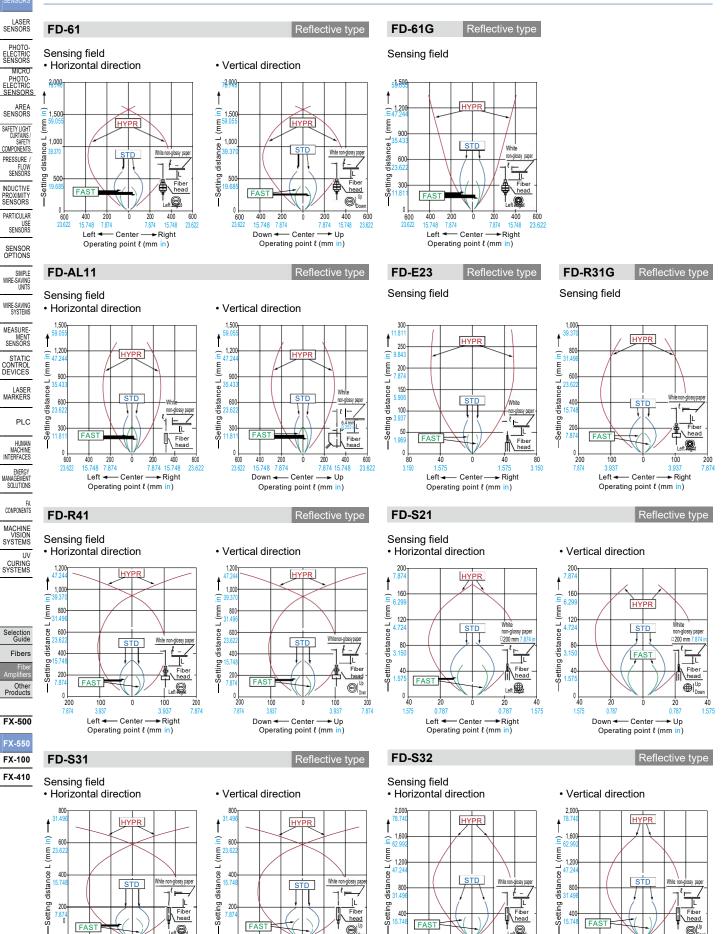

Left - Center ► Right Operating point { (mm in)


1 969

161

100 50 0 50 100 150

FAST @! 150 100 50 0 50 100 150 3 937 1.969 1,969 → Up






- Center Right Left Operating point { (mm in)

600

23.623

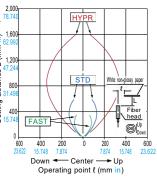

FX-100 FX-410

Fibe Other Products

FX-500

118

SENSING CHARACTERISTICS (TYPICAL)

Contact our office for sensing characteristics that are not contained here.

